


ASSEMBLY INSTRUCTIONS

8931R-TB


PART LIST

DO NOT FULLY TIGHTEN SCREWS AND NUTS UNTIL THE ENTIRE ITEM IS COMPLETELY ASSEMBLED


(A) Top Assembly - (1pc)

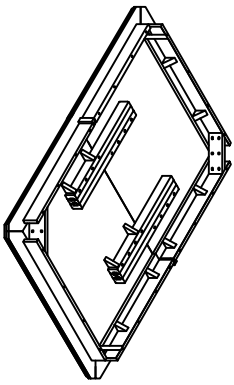

(B) Extension Leaf - (1pc)

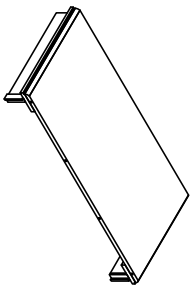

 (C) Legs - (4pcs)



HARDWARE LIST

Nut



Spring Washer



(1) Ø5/16" x 6mm
(8pcs)

Flat Washer



(3) Ø5/16" x 19mm
(8pcs)


(2) Ø5/16" x 13mm
(8pcs)

Wrench




(4) Ø5/16" x 90mm
(1pc)


STEP 1

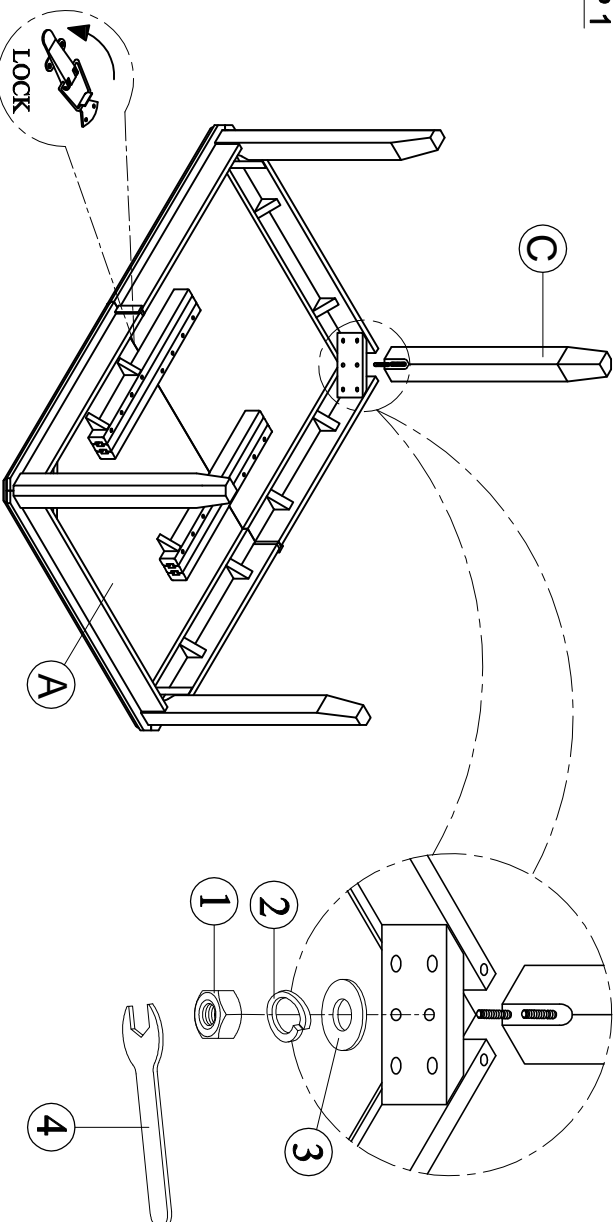

STEP 2

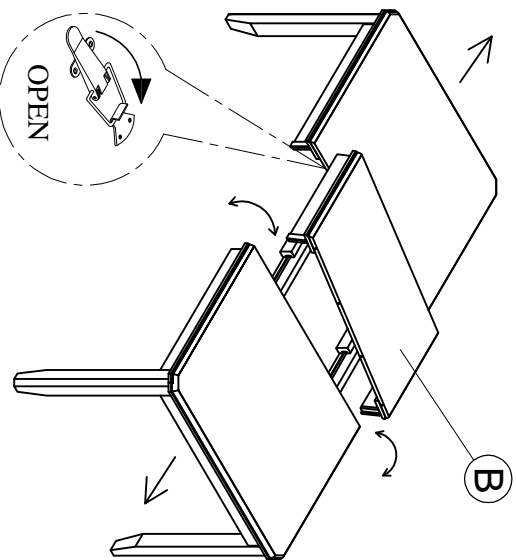

STEP 3

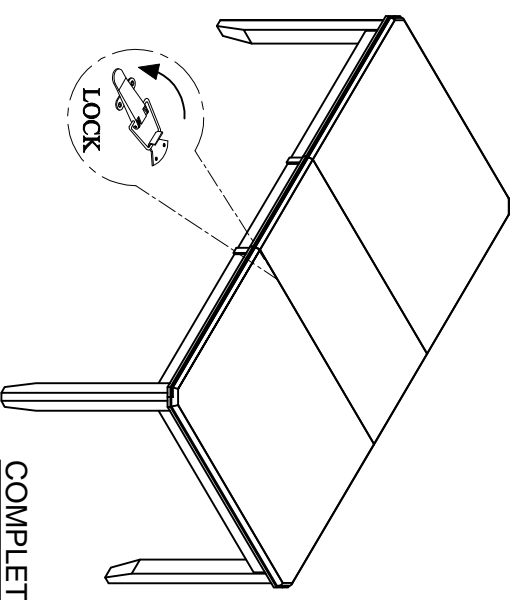




COMPLETE.

ASSEMBLY INSTRUCTIONS

8931R-SC

PART LIST

DO NOT FULLY TIGHTEN SCREWS AND NUTS UNTIL THE ENTIRE ITEM IS COMPLETELY ASSEMBLED

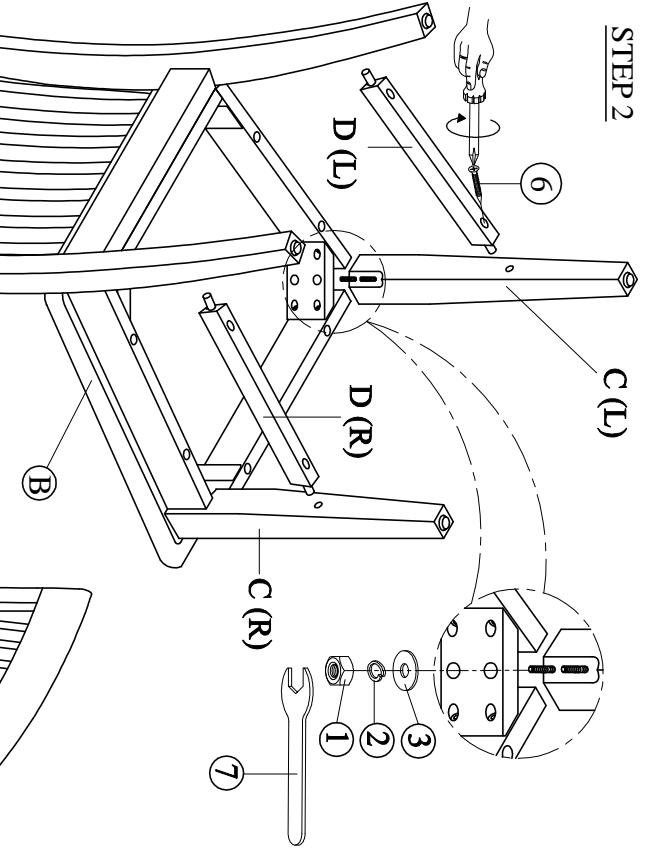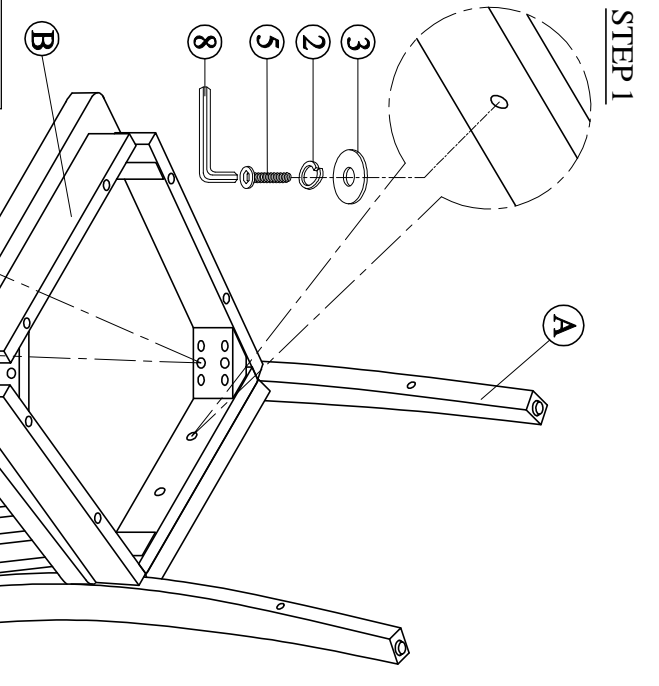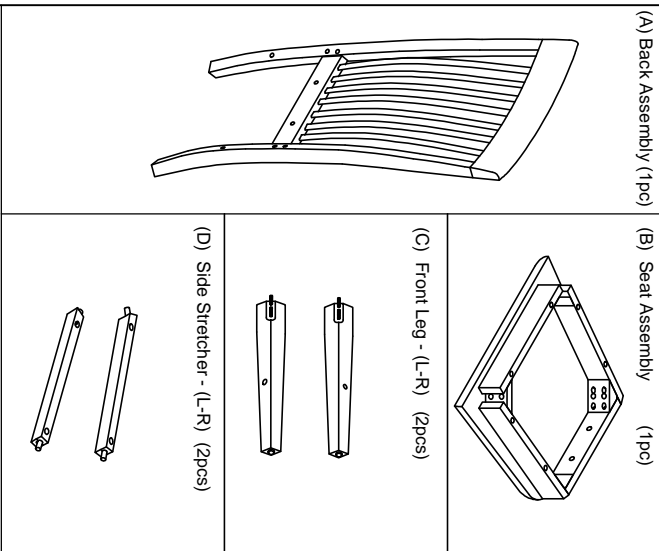



HARDWARE LIST

Nut	Spring Washer	Flat Washer	Long Bolt
(1) Ø5/16" x 6mm (4pcs)	(2) Ø5/16" x 13mm (10pcs)	(3) Ø5/16" x 19mm (10pcs)	(4) Ø1/4" x 75mm (4pcs)
Short Bolt	Wood Screw	Wrench	Allen Key
(5) Ø1/4" x 40mm (2pcs)	(6) Ø4mm x 38mm (4 PCS)	(7) Ø5/16" x 90mm (1pc)	(8) 4 mm (1pc)

TOOL REQUIRED



Screw Driver (Not Provided)

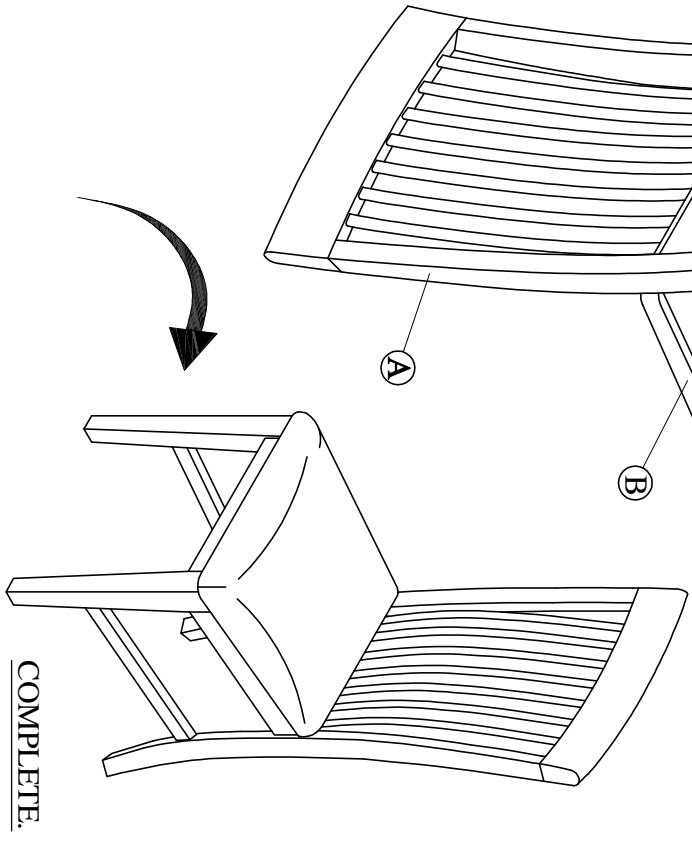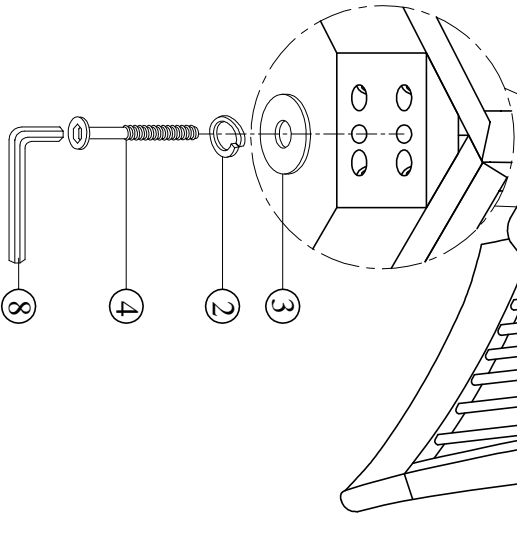

COMPLETE.